




Place your male quick disconnect inside the outline to determine the correct coupler and size.

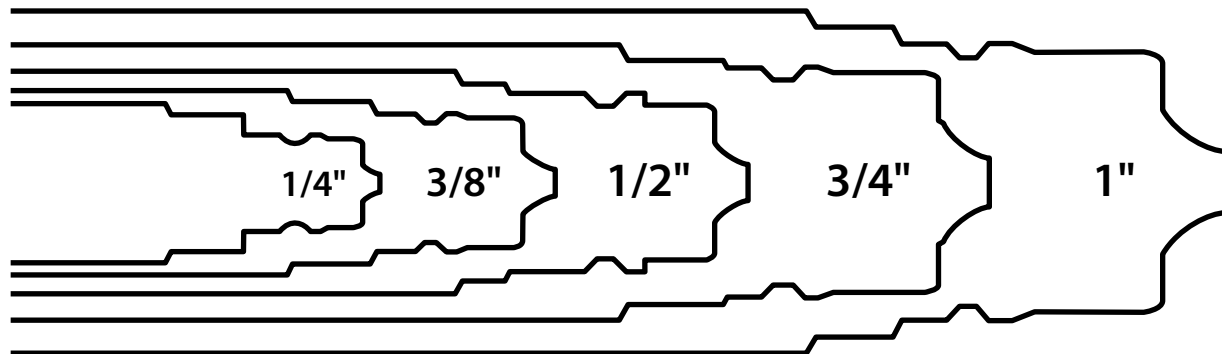


600 Series ISO 7241-1 Series A Hydraulic Interchange, page 4

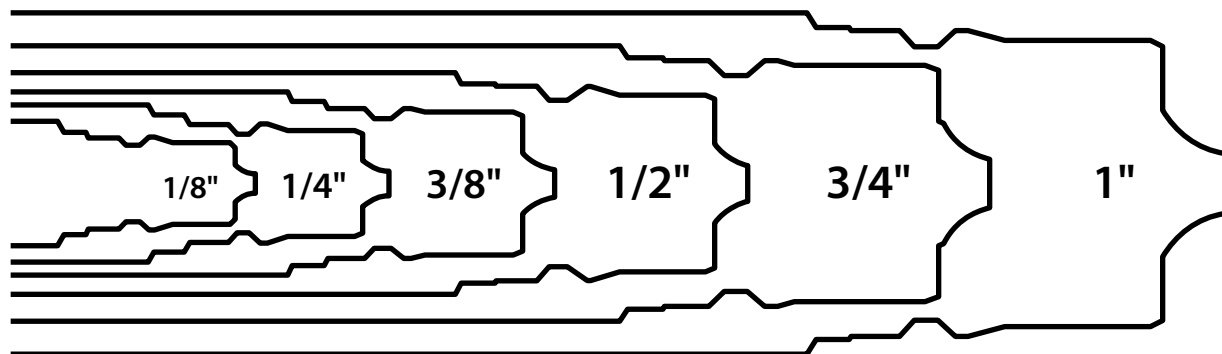


700 Series ISO 7241-1 Series B Hydraulic Interchange, page 5

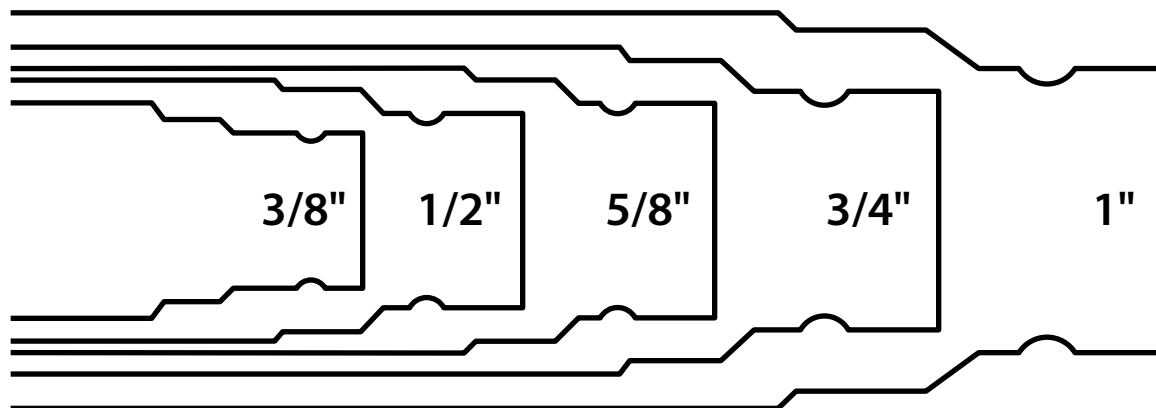

HT Series ISO 16028 Flushface/Skidsteer Interchange, page 9

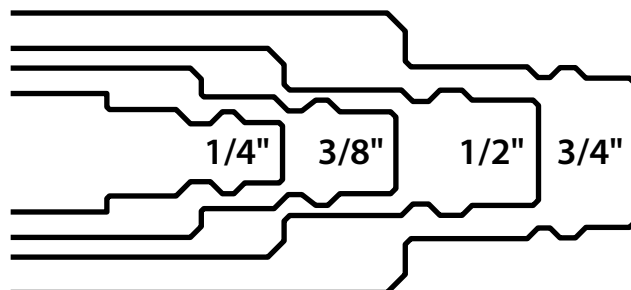

Industrial Interchange (pneumatic), page 14

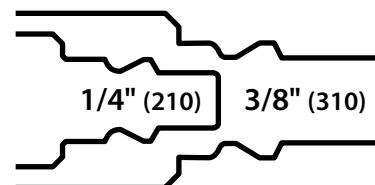

ARO Speed Connect (pneumatic), page 16