


Be Safe When Installing Quick Couplings Safety Exhausting Coupler Operation



- 1** To Disconnect;
Begin by holding the hose with three of your fingers leaving your thumb and index finger free.



- 2** Grab the sleeve with your thumb and index finger and begin to pull the sleeve towards the palm of your hand.

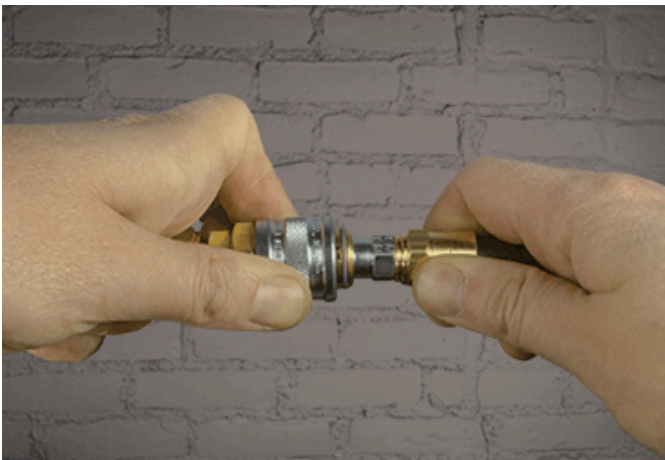

- 3** After pulling the sleeve, the plug will move out of the couple slightly. Continue to hold the hose and coupling sleeve until all air is fully exhausted.



- 4** After the line is fully exhausted, you are able to safely separate the plug from the coupler.